

Noise Protection

Noise Protection

Universal Fit Ear Plugs

Ear Defenders

Ear Plug Filters



Mino CENS®

Mino CENS® are level dependent electronic ear plugs that provide an impressive 31dB SNR with the ability to enable the wearer to hear sounds around them. The state-of-the-art digital amplifier ensures that each user is never subjected to over attenuation and is as effective in a quieter environment as it is in the very noisiest environment.

Like full CENS® ProFlex, Mino CENS® still allow for clear communication as well as featuring 3 user-selectable levels of amplification for enhanced ambient awareness. They also feature stylish transparent red and blue shells, indicating the left and right device, each of which is fitted with a replaceable wax guard and an extraction cord for easy removal from the ear.



Suggested Buy



- 31dB SNR
- Certified To EN352-2:2002 & EN352-7:2002
- Effectively Suppresses Dangerous Noise Levels
- 3 User-Selectable Amplification Levels
- Hear Conversation As Normal
- Unobtrusive, Comfortable Universal Fitting
- Colour Coded Earpieces (Red For Right, Blue For Left)

Mino CENS® are supplied with 5 different sized high quality foam ear tips, providing an effective and comfortable wearing experience. Mino CENS® tips are colour coded by size, so simply find the tip size that best fits, then reorder only the colour required.

Available in two models - Mino CENS® (for shooting) & Mino CENS® Industrial. Quantity breaks available. Contact us for details.

Mino CENS® maintenance kit also available which contains:

- 2 of each 10.5 mm (L), 10.5 mm (S), 12 mm (L), and 14 mm (S) foam tips.
- Brush tool with magnet.
- 2 micro Pureguard tools.
- 1 left & 1 right Pureguard wax guard.



Mino Cord

MN-CENS-001-EN	Mino CENS® - English
MN-CENS-001-DE	Mino CENS® - German
MN-CENS-001-SP	Mino CENS® - Spanish
MN-CENS-001-IT	Mino CENS® - Italian
MN-CENS-002-EN	Mino CENS® Industrial - English
MN-CENS-002-DE	Mino CENS® Industrial - German
MN-CENS-002-SP	Mino CENS® Industrial - Spanish
MN-CENS-002-IT	Mino CENS® Industrial - Italian

ACC148G	Mino Cord
ACC102M-BLACK	Foam Tips - 12 mm (S)
ACC102M-BLUE	Foam Tips - 10.5 mm (L)
ACC102M-GREEN	Foam Tips - 10.5 mm (S)
ACC102M-ORANGE	Foam Tips - 14 mm (S)
ACC102M-RED	Foam Tips - 12 mm (L)
ACC443	Mino CENS® Maintenance Kit

ER-20 Music Earplugs

ER-20s provide an inexpensive and effective solution to noise protection. Made from soft silicone, these generic noise suppressors fit any ear and provide an attenuation of 20dB, while still allowing the natural sound of the environment to be heard. Standard unfiltered noise plugs generally reduce high frequencies more than others, making voices and music sound unclear. Because ER-20s are a flat response earplug, they closely match the ear's natural frequency response, minimising the loss of high frequencies when performing.

Ideal for clubs, concerts and noisy working environments, ER-20s are supplied with a key chain case for easy storage, and if maintained regularly can last for many years.

ER-20s are available in two sizes, standard and baby blue, which are ideal for small ear canal and children.



ER20S Large Clear
ER20SMC Small Blue

CENS® ProFlex Universal Tip Kit

Introducing the universal solution for wearing CENS® ProFlex prior to using custom-made earpieces.

These new eartips perfectly fit CENS® ProFlex Electronic or Passive Modules (not supplied), allowing the user to experience the comprehensive noise protection of CENS® without the need for a custom-made earpiece.

The soft silicone domed eartips are supplied in two sizes, allowing the completed earpiece to fit comfortably into the ear, without falling out during use. Once the user has got used to CENS® ProFlex digital, the electronic modules can be fitted into custom-made earpieces for the complete CENS® ProFlex experience.


Supplied with 2 x flexible generic tips (L & R), 2 x large domed silicone eartips, 2 x small domed silicone eartips, 2 x alcohol wipes, fitting tool and zip case with foam insert.



CENS-UT-KIT Universal Tip Kit
ACC404-1 Replacement Alcohol Wipe

Sonic II Shooter Filter

For fitting into custom-moulded earpieces for shooting noise suppression. Allows ambient noise to enter, while instantly shutting out gunshot noise.

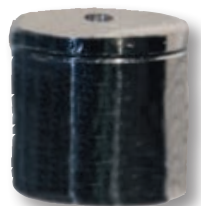

F7 Sonic II Shooter Filter

Noise Braker® Filter

For fitting into custom-moulded earpieces for hearing protection. Allows for ambient sound to enter the user's ear, while helping to reduce harmful noise to safe levels.



F5 Noise Braker® Filter

3M™ Foam Ear Plugs



Soft, uncorded disposable earplugs. Hypo-allergenic slow recovery foam with a tapered surface. Box of 200 pairs.



ACC377 3M™ Foam Ear Plugs

Acu-Life® Impact Noise Reducers



The AcuLife® premium music earplugs have a noise reduction rating of 18dB. They improve listening pleasure, reduce discomfort from loud impact music using the internal diaphragm to block loud sound impulses. Soft silicone cushion for maximum comfort.



ACC435E Impact Noise Reducers

EarGuards

The first universal ear plug for both noise and swim ear protection with the patented CeramX filter. Supplied in pairs with small and large sizes to fit both adults and children.



ACC374 EarGuards

Peltor™ Optime III Ear Defenders

Peltor™ Optime III ear defenders have been developed for use in extremely high noise environments, particularly those dominated by low frequency sounds. The product is based on a technology featuring double cup design to help minimise resonance effect, resulting in excellent high frequency attenuation. In addition, a combination of specially designed spacer and cup helps to provide excellent protection against low frequency sounds.



BIL219B Ear Defenders

EarPlanes

Proven and used by millions of air travellers worldwide. Relieves ear discomfort, clogging and popping with the exclusive CeramX filter that regulates air pressure naturally. Supplied in pairs.



ACC372 Adult Size

ACC373 Child Size

Sound Level Meter

Features a range from 35 to 130dB, as well as maximum hold function, A & C frequency weightings, fast & slow dynamic characteristic models, AC and DC signal output and back-screw for tripod fixture.



SLM1 Sound Level Meter